

**vtech**<sup>®</sup>

# Instruction Manual

## Chomp-along Dino



**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** *Baby*

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


*4-10 years*



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **VTech® Chomp-along Dino**. This hungry Dino uses silly jokes to teach numbers, counting, colours and names of foods. Don't forget to take him for a walk!

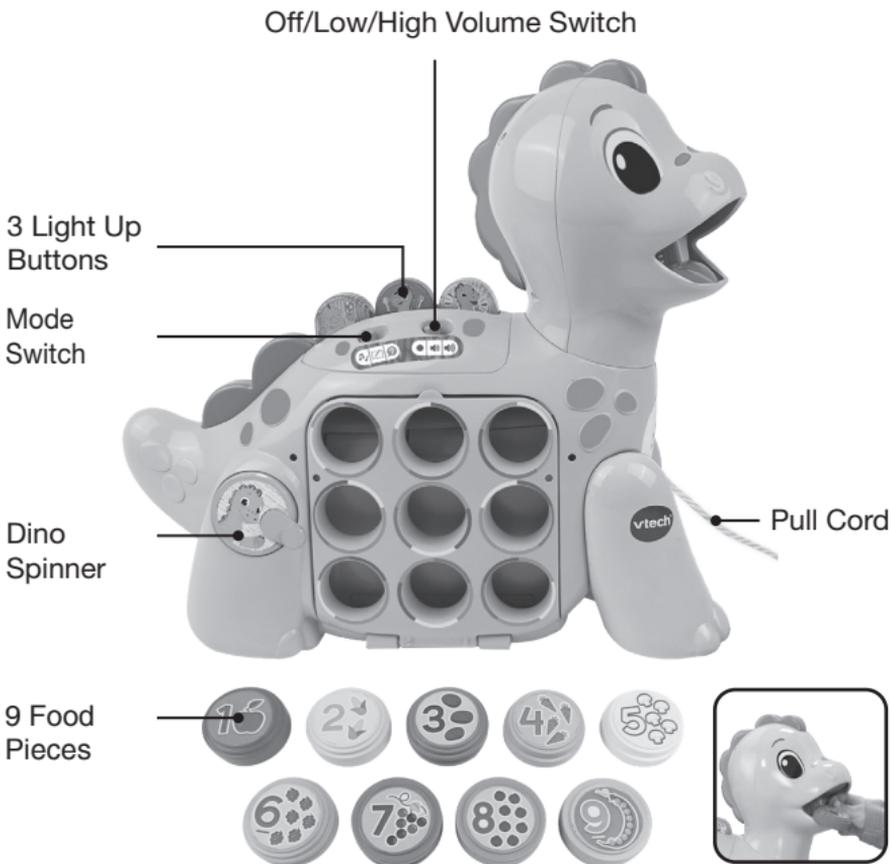

# INCLUDED IN THE PACKAGE

- One Chomp-along Dino
- 9 Food Pieces
- One Quick Start Guide


## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE


Please save this Instruction Manual as it contains important information.

## Unlock the Packaging Locks

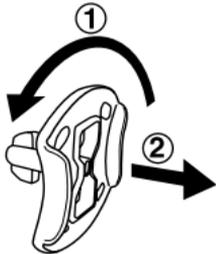

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

## Remove the Product Attachments

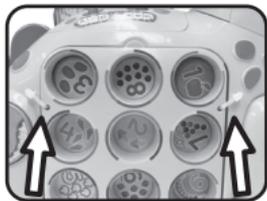

- ① Carefully cut the two ties on the storage door with a pair of scissors and discard.




- ② Open the storage door. Take out the paper inside the Dino and discard.

# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the left side of the Dino's body, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

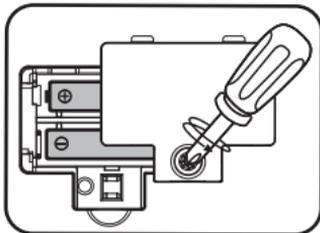

### **WARNING:**

Adult assembly required for battery installation.

Keep batteries out of reach of children.

### **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Help protect the environment by disposing of your product or batteries responsibly.

## VTech® cares for the planet:

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

### In the UK:

Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

### In Australia & New Zealand:

Check with your local council for kerbside collections.

# ACTIVATE NORMAL PLAY MODE

Before playing with the Dino, activate Normal play mode by feeding the Dino two **Food Pieces** within 20 seconds.

You will hear three beeps to indicate that the Dino is in Normal play mode.

## PRODUCT FEATURES

1. **Off/Low/High Volume Switch** 

To turn the unit **On** or adjust the volume, slide the **Off/Low/High Volume Switch** to Low  or High . To turn the unit **Off**, slide the switch to **Off** .

2. **Mode Switch** 

Slide the **Mode Switch** to choose from three activities: Music , Learning  or Quiz  mode.

3. **9 Food Pieces**

Each **Food Piece** features a colour, a number and a food. Feed the Dino to learn fun facts, listen to sing-along songs or answer questions.



#### 4. 3 Light Up Buttons

Press the **Light Up Buttons** to learn about colours and feelings, hear sing-along songs or answer questions.



#### 5. Dino Spinner

Turn the **Dino Spinner** to spin **Food Pieces** inside the Dino, play sing-along songs and hear fun facts.



#### 6. Pull Cord

Pull the Dino along to hear fun melodies and Dino sounds.



#### 7. Storage Door

Keep the storage door closed when feeding the Dino the **Food Pieces**. Open the storage door to remove the **Food Pieces**. When playtime is over, store the **Food Pieces** in the compartment.



#### 8. Automatic Shut-Off

To preserve battery life, the **Chomp-along Dino** will automatically shut off after several seconds without input. The Dino can be turned on again by sliding the **Mode Switch** or the **Off/Low/High Volume Switch** to any position.

# TO BEGIN PLAY

Slide the **Off/Low/High Volume Switch** to Low or High volume to turn the unit on, then slide the **Mode Switch** to choose an activity.

## ACTIVITIES

### 1. Music Mode

Slide the **Mode Switch** to enter Music  mode. Feed the Dino, press the **Light Up Buttons** or turn the **Dino Spinner** to listen to sing-along songs. Pull the Dino along to hear melodies and fun sounds.

### 2. Learning Mode

Slide the **Mode Switch** to enter Learning  mode. Feed the Dino, press the **Light Up Buttons** or turn the **Dino Spinner** to learn about colours, numbers, food and feelings.

### 3. Quiz Mode

Slide the **Mode Switch** to enter Quiz  mode. The Dino will ask questions about food, colours, numbers and feelings. Insert a **Food Piece** or press a **Light Up Button** to answer. Turn the **Dino Spinner** to repeat the question.

## SONG LYRICS

### Song 1

One crunchy yummy, sweet apple,  
Nothing else tastes so fine.

### Song 2

Two sweet yellow ears of sweetcorn,  
They will take some time to grow.  
Do you or I or anyone know,  
How much I love sweetcorn!

### **Song 3**

Three brown potatoes,  
Make yummy, yummy french fries!

### **Song 4**

Orange carrots are a treat.  
Four crunchy carrots help me see!

### **Song 5**

Five mushrooms grow,  
In the ground, in the ground.  
White mushrooms grow in the ground.

### **Song 6**

One raspberry under a tree,  
Two for you and three for me.  
Four raspberries in my hand,  
Five on the bush, six turned to jam.

### **Song 7**

Purple grapes,  
One, two, three, four, five, six, seven,  
Purple grapes.  
Juicy and delicious,  
Purple grapes.

### **Song 8**

Blueberries grow in clusters.  
Blueberries, I'll take eight.  
Blue in colour, sweet in taste.  
Blueberries taste great!

### **Song 9**

Little green peas, in the pea pod.  
Taste so fine, taste so fine.  
I guess I'll have to count them.  
Look, there's nine, look there's nine.

### **Song 10**

Healthy hearty veggies grow in warm sunshine.  
So many yummy treats, they all taste so fine.  
Lots of healthy food makes me big and strong.  
I have so much energy I can roar all day long.

### **Song 11**

I'm a hungry dinosaur,  
I like to stomp; I like to roar.  
If you can find my favourite treats,  
I'll count and sing to you.

### **Song 12**

I would like a nap,  
I'm so sleepy now.  
Perhaps I need a snack,  
I feel much better now.

### **Song 13**

Across the field I run and play.  
Happy Dino, sunny day.  
Climb on my back, we'll run away.  
We'll be friends forever.

### **Song 14**

Sleepy Dino, Happy Dino,  
Hungry Dino, Playful Dino,  
Green Dino, Veggie Dino.  
Won't you play with me?

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit will now be ready to play with again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)  
Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155  
Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785  
Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***

